

## RS232 Up To 1000ft.



the RS232 extender

**Buy Now**

**Extends your RS-232 device up to 1000 feet away from your computer.**

### How it works

The RS-232 Extender sender unit connects to your computer using the supplied cable. The extended RS-232 device connects to the receiver unit. CAT-5 cables connect the send and receive units - up to 1000 feet away. The sender is powered by a 5 volt power supply, which also powers the receiver side.

### Package Includes:

RS232 Extender S Sender Unit  
RS232 Extender R Receive Unit  
6 foot serial cable  
5V external power supply

### Features:

- One CAT-5 cable extension
- Installs in seconds

### Specifications:

- Conforms to RS-232C standard
- Power Supply: 5 VDC (External)
- Dimensions: 1"W x 4"D x 1"H
- Shipping Weight: 3 lbs.

